MULTIQUARTZ is a name well known and appreciated by many **Directors of Photography**, that use it with satisfaction since many years and love its ruggedness, coupled to its unique features both electronics and mechanics.

MULTIQUARTZ

MULTICONTROL FOR ARRI 35 III

OPERATING INSTRUCTIONS



The **MULTIQUARTZ** is a very sophisticated, yet rugged unit that is used together with **Arri 35 III** cameras, designed **according the needs of ever more demanding Film Industry**.

No modification is necessary to the camera!

The unit, after being mechanically and electronically connected, can be immediately used.


All the controls are ergonomically set on the front panel so, with a short practice, You will be acquainted and familiar with the control knobs to start filming with Your **MULTIQUARTZ**.


It is advisable, to get immediately the best from Your MULTIQUARTZ, to spend a few minutes reading and understanding the following pages.



CRYSTAL CONTROLLED SPEED OPERATIONS

Through the MAIN Selector knob (1), is is possible to select the following frame rates :

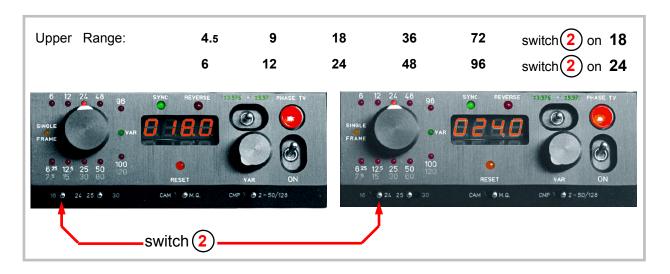

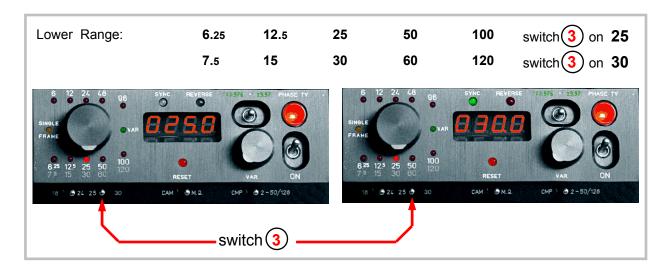

All these speeds are **Crystal controlled** with an accuracy of \pm 15 ppm, corresponding to \pm 1 frame over 1.000 feet .

These speeds can be varied up or down, even when the camera is running, allowing the possibility to make unique special effects (provided the necessary **f/stop** adjustments). Within each range (18 - 24 - 25 - 30) each speed differs from the next of exactly one **f/stop**.

When the MAIN Selector knob (1) is set on any position from 6 to 48 (4.5 to 36) or from 6.25 to 50 (7.5 to 60), the auxiliary selector switch (4) MUST stay on its central position! Only in this case the speeds will be selected through the MAIN Selector knob (1)!

This **switch** 4 gives You the possibility to use two extra crystal controlled speeds:

23.976 and **29.97** fps

- **23.976** fps must be used with **144° shutter**: it is employed to shoot both playing actors and TV sets on the same scene, locking the "shutter bar" on television sets.
- **29.97** fps must be used with **180° shutter**: it is employed to film only the screen of a television set, without people moving.

Both these speeds are for filming television sets working on **NTSC** System (U.S.A., Japan, etc.)

The selector switch (4) is automatically unoperative, for safety purposes, when the MAIN control knob (1) is set on 96 (72), VAR or 100 (120) fps.

PHASE TV

PHASE TV red pushbutton (5) is used, when the camera is running, to change smoothly the speed of the camera. It works at any selected rate of fps.

When it is used with TV filming speeds, with appropriate shutter setting, it moves the "shutter bar" in any desidered position within the frame . When the button is released, "shutter bar" is locked in the selected position.

When this button is depressed when camera is off, it allows to film short slates or to check the correct film loading.

HIGH SPEED OPERATIONS

The following **HIGH SPEED** rates are available:

96 (72) and 100 (120) fps: all of these Crystal controlled.

On VAR mode at any speed up to 130 fps.

During **HIGH SPEED** operations, the selected speed is automatically reached smoothly with a soft start using an **acceleration "ramp"**, making easier and safer the filming even with full load and cold weather.

SYNC speed green cue light will glow when sync is reached.



An auxiliary 12 V battery is needed to shoot **HIGH SPEED** takes. It must be plugged into the auxiliary 4 pin Cannon connector, located on the right side of MULTIQUARTZ.

The plug of the connection cable MUST have absolutely the same outputs of the camera cable!

Any spare camera cable is valid!

VARIABLE SPEED OPERATIONS

When the MAIN selector knob 1 is set on VAR position, the speed can be manually changed through infinite positions, with control knob 8 from 2 up to 50 fps on normal operations. When HIGH SPEED is selected, speed rates from 2 up to 130 fps are available. A second 12V battery must be connected to the MULTIQUARTZ.

Selector switch (7) must stay on 2 - 50/130 position.

MULTIQUARTZ has a special feature: the CMP (COMPUTER) position of the selector switch 7, that allows a fine, micrometric adjustment of the speed from 26 up to 36 fps with the same control knob 8. This is used to film computer monitors, that usually are not running on exact TV sync frame rates. Camera shutter must be set on 180° position.

Camera speed must be adjusted with **control knob** 8 turning it gently until the "shutter bar" in the monitor is stationary. Then You move it off the frame just pressing the **PHASE TV** red **pushbutton** 5, as usual. This can be reharsed without film.

MULTIFUNCTION DISPLAY

The **MULTIFUNCTION Display** is a powerful tool inside the MULTIQUARTZ.

The display shows **in advance** the selected speed, when the camera is off. This feature allows to save film stock, especially when You select a speed on **VAR** mode, with camera not running.

You will soon appreciate this feature: it is very important to know and check the selected frame rates always in advance!

When the camera starts, automatically the **Tachometer** will show the actual speed of the camera. **The accuracy** of the reading is: \pm **0.1** fps.

When on SINGLE FRAME mode, the display will change automatically into **Exposed frames counter**, so that the display will not show any longer the speed, but the exposed frames.

CAM - MQ

The **switch** (9) **CAM** - **MQ** selects the operation mode either from internal controls of the camera (**CAM**) or from MULTIQUARTZ (**M.Q.**).

When the **switch** (9) is set on **CAM** position and the camera is off, the display will show only the speed selected from MULTIQUARTZ, because there is no sufficient information available from camera electronics to know the **fps** in advance.

When the camera is running, actual speed is shown with better resolution of the camera tachometer.

SINGLE FRAME OPERATIONS

On SINGLE FRAME position, selected through the MAIN control knob (1), the multifunction display will change automatically from Tachometer to Exposed frames counter and the same Phase TV red pusbutton (5) will be then used for single shots.

RESET pushbutton (11), is used to zero all the digits of the display, anytime is needed.



Two operations mode are possible:

A) Continous : just running the camera. The frame rate is 90 fpm (frames per minute) or

1.5 fps , Crystal controlled , with an exposure time of **1/3** sec.

Switch (2) must be set on 24.

B) Single shots: by depressing gently the red pushbutton (5) (PHASE TV) or through

the Remote Control/Phase Shifter accessory.

Exposure time is always 1/3 sec.

Exposed frames will be shown on the **Multifunction display**.

Operation are possible either **FORWARD** or **REVERSE**; but, when set on REVERSE mode, counter will not decrement.

REVERSE OPERATIONS


To operate on **REVERSE**, **ARRI 35 III** cameras must be equipped with no-standard longer claw.

A FORWARD-REVERSE switch is inside the cover cap on the right side of MULTIQUARTZ.

REVERSE operations is announced by the **red cue light** over the display, that will stay <u>on</u> all the time the MULTIQUARTZ will run the camera on **REVERSE**. This cue light is blinking on the latest versions to evidence even more the special preset of MULTIQUARTZ and camera!

With modified cameras and Standard MULTIQUARTZ, operation on **REVERSE** are safely possible only up to **50 fps**. A safety circuit inside the MULTIQUARTZ prevents possible mistakes, allowing HIGH SPEED shooting only **FORWARD**.

REVERSE OPERATIONS

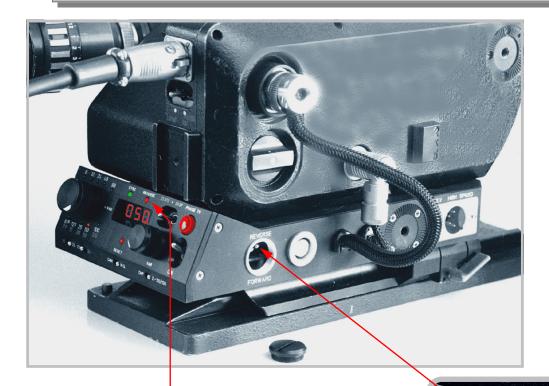


Red **CUE** light



A special version of MULTIQUARTZ is available, with the possibility to shoot both FORWARD and REVERSE, even at HIGH SPEED and with a top speed of **130 fps**.

Especially modified cameras are needed for that!

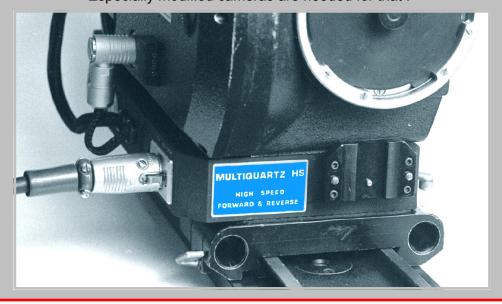

BATTERY MONITOR INDICATORS

BATTERY MONITOR indicators on the left side of MULTIQUARTZ will show all the time the approximate charge of your batteries in **% increments** and the correct polarity of the cables, when they are lit.

When last LED is on, an approximated **25** % charge is left on the battery.







ACCESSORY Fischer socket

The socket on the right side of MULTIQUARTZ allows external accessories to be used with Your unit:

- A) Remote control/Phase shifter, useful with <u>Video Assist</u> and the camera far from the operator or for SINGLE FRAME operations, when the camera must be absolutely fixed and not touched.
- B) As power supply socket for zoom controls, radio remote controls and other possible devices.

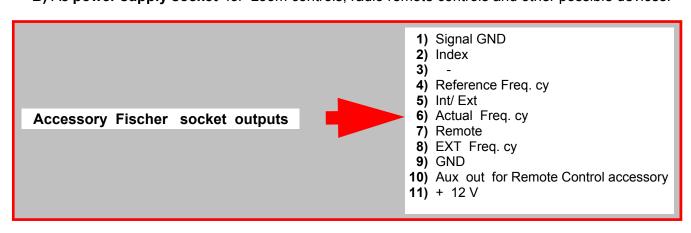

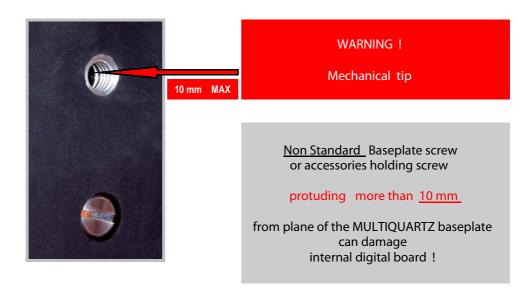

Due to the highly sophisticated electronics modules inside Your MULTIQUARTZ, it is advisable not to attempt any unauthorized adjustment.

Contact Your Agent for that!

Your MULTIQUARTZ has been manufactured with the best components available from the state of the art and servicing with other than specified or commercial spares will not certainly improve its features and specifications .

Special care has been devoted to minimize all the factors that can influence the reliable, money making work of Your MULTIQUARTZ, through a careful marriage of the materials selected .

Years of dependable rental work on hard jobs have demonstrated its capabilities with full satisfaction of our Customers!